

MAXIMUM PRODUCT LOAD RATING: 150 kg 

IMPORTANT:

- **LOAD = WEIGHT OF PLATFORM or BARS + MOUNTING SYSTEM + ACCESSORIES + CARGO**
- **PLEASE REFER TO VEHICLE MANUFACTURER SPECIFICATIONS FOR MAX ROOF LOAD CAPACITY OF VEHICLE. THE LOWEST LOAD RATING APPLIES.**
- **OFFROAD RATING: SCAN QR CODE FOR LOCKNLOAD LOAD RATING GUIDE. REDUCTIONS MAY APPLY.**
- **THIS IS ONLY TO BE USED ON A VOLKSWAGEN TRANSPORTER T6 FACTORY TRACK.**



FIRST TIME INSTALLATION

- Please read instructions carefully before installation.
- Check the contents of kit. Each LockNLoad RuggedLine has the last four digits of the kit's part number lasered in. Contact your YAKIMA dealer if any parts appear missing, incorrect or damaged.
- Clean your roof thoroughly prior to fitting the LockNLoad RuggedLine.
- Place these instructions in the vehicle's glove box after installation is complete.



TOOLS REQUIRED:


- 13 mm Spanner
- 10 mm Spanner

KIT CONTENTS

ITEM	COMPONENT	QTY	ITEM	COMPONENT	QTY
1.	Transporter T6 RuggedLine RH 2171	x1	7.	M6 Washer	x12
2.	Transporter T6 RuggedLine LH 2171	x1	8.	M6 Self Aligning T-Bolt	x12
3.	Pivot Bracket	x6	9.	M6 Nyloc Nut	x12
4.	M8 Socket Head Cap Screw 20 mm	x6	10.	Adhesive Backed Foam	x12
5.	M8 Washer	x12	11.	4 mm T-Handle Ball End Allen Key	x1
6.	M8 Nyloc Nut	x6	12.	6 mm T-Handle Ball End Allen Key	x1



PLATFORM & COMPONENTS SOLD SEPARATELY
RECOMMENDED PLATFORM SIZE IS 'U' (9820380)

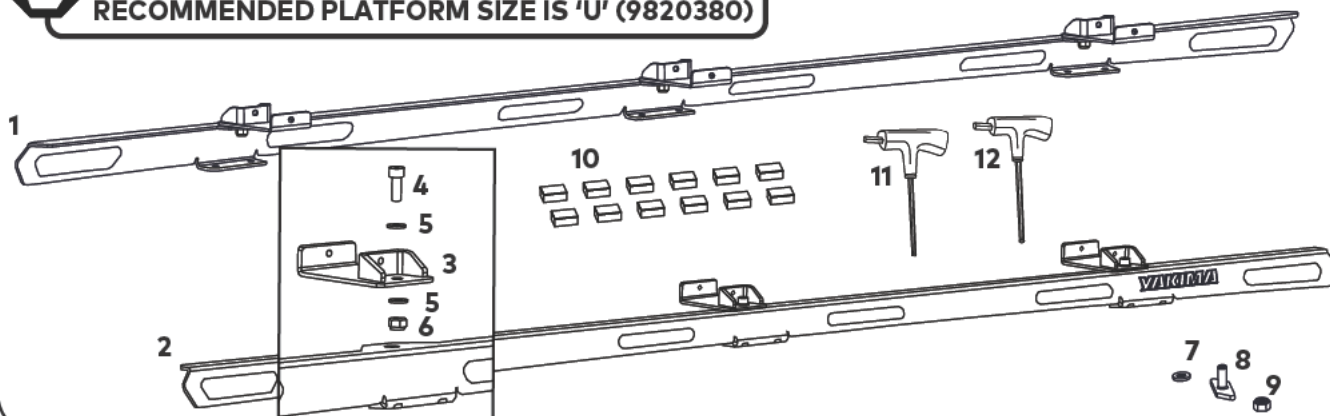

PREPARING SELF ALIGNING T-BOLTS


1

APPLY ADHESIVE BACKED FOAM.

Clean the underside of the Self Aligning T-Bolts with isopropyl alcohol or other appropriate cleaning solution where the Adhesive Backed Foam is to be applied.

Remove the backing tape from the Adhesive Backed Foam to expose the adhesive. Take care not to touch the adhesive as this may affect adhesion.

Install the Adhesive Backed Foam to the underside of each Self Aligning T-Bolt as shown.

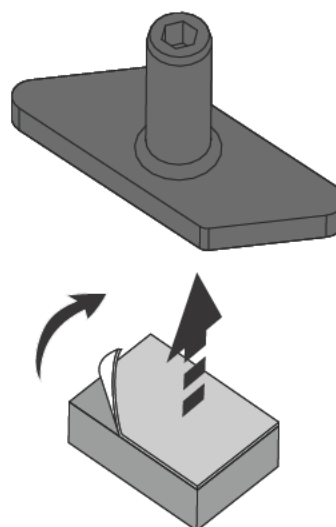


x12

2

INSERT SELF ALIGNING T-BOLT.

Insert M6 self aligning T-bolt into track by placing inside track and turning clockwise to lock into position.

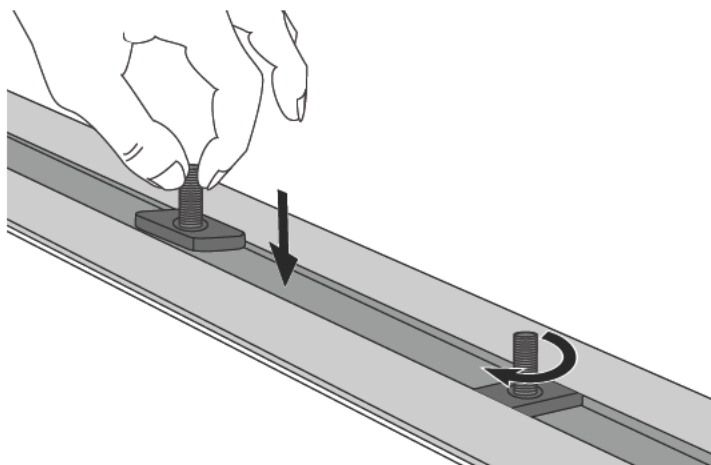


MOUNTING RUGGEDLINE

1

POSITION RUGGEDLINE ON VEHICLE ROOF.


Referring to the left-right orientation on top of each RuggedLine, carefully place one side of the RuggedLine onto vehicle tray roof as shown. Line up the mounting holes on the bottom tabs to the Self Aligning T-Bolts installed in the previous steps. The tabs are to face in towards the vehicle.

Front of vehicle

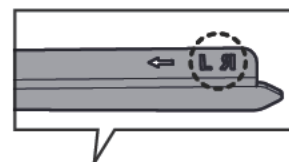


2**ASSEMBLE RUGGEDLINE MOUNTING HARDWARE.**

Align the RuggedLine mounting holes with the T-Bolts. Assemble the M6 washers and M6 Nyloc nuts as shown.

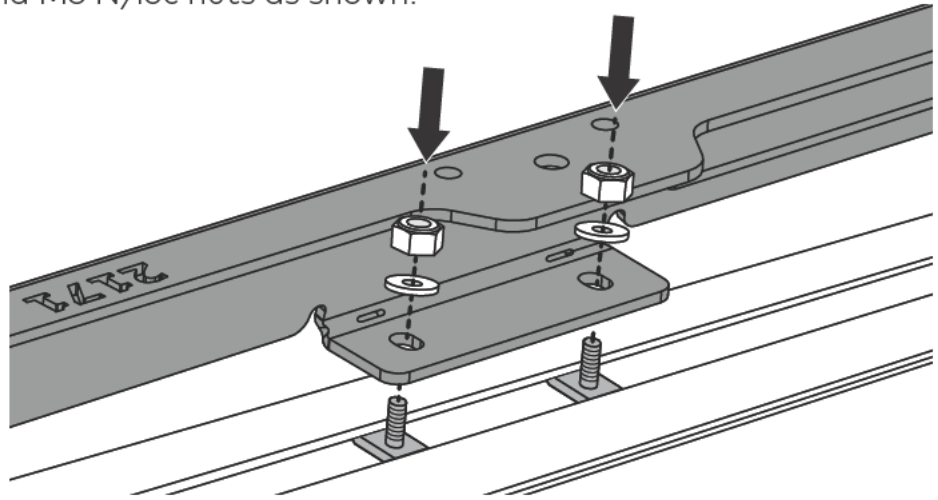
**3****TIGHTEN RUGGEDLINE MOUNTING HARDWARE.**

Using the 10 mm Spanner, and avoiding damage to the powder coat, carefully secure the RuggedLine by tightening the M6 Nyloc nut to 7 Nm.

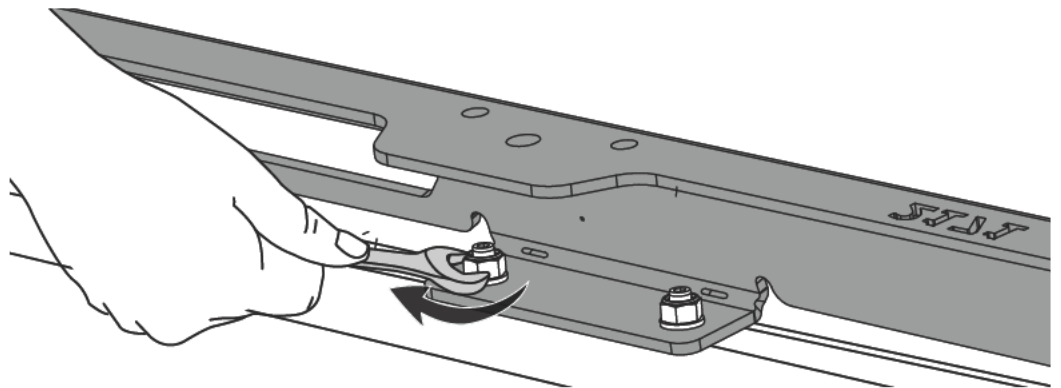**4****REPEAT STEPS TO OPPOSITE SIDE.**

Repeat steps 1-3 for securing opposite side RuggedLine.

Ensure both RuggedLine are securely positioned on the vehicle roof. Check each Nyloc Nut is secure before proceeding to install LockNLoad Platform to your RuggedLine.

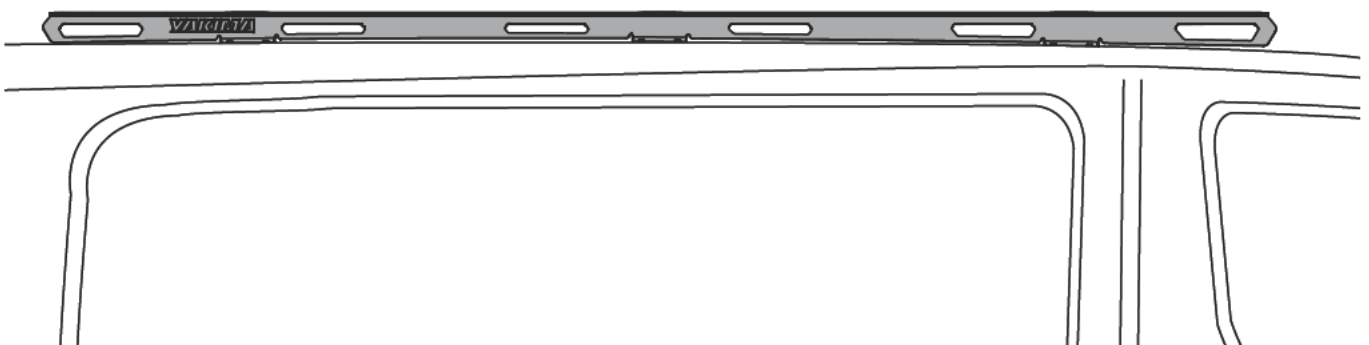

Retain the 6mm T-Handle Ball
End Allen Key and not yet installed
Pivot Brackets, M8 x 20 mm
Socket Head Cap Screws,
M8 Nyloc Nuts and M8 Washers.



!

This page intentionally left blank



www.yakima.com.au
www.yakima.co.nz
www.yakima.com
www.yakima.eu

YAKIMA AUSTRALIA PTY LTD

17 Hinkler Court
Brendale, QLD 4500
Australia
1800 143 548

YAKIMA PRODUCTS, INC.

4101 Kruse Way
Lake Oswego, OR
97035-2541
USA
888 925 4621
yakima.com/support

ALL CONTENT SUBJECT TO YAKIMA AUSTRALIA PTY LTD COPYRIGHT © 2024