

# K185 ASSEMBLY AND FITTING INSTRUCTIONS

## Kit Contains

1 x Set of assembly instructions  
1 x 5mm Allen/Hex Key  
4 x Clamps  
4 x Capscrews M6x35  
4 x Capscrews M8x30  
4 x Spring Washers M6  
4 x Plastic Washers M8  
4 x Steel Washers M8

Contact your supplier if any items are missing

## Items you may require that are not included:

Tape Measure  
Step Ladder (for taller vehicles)  
10mm Socket

### Important Notes:

Disregard sections 2 - 5 in the Crossbar Assembly Instructions and refer to these instead.

Maximum  
P-Bar  
Load  
Rating

50  
kg

When Fitted and loaded correctly

## 1. Crossbar Legs And Internal Clamp Preparation



1.1



1.2




- Remove the bottom adjusting screw on each leg
- Fit a rubber pad to the bottom surface of each leg.
- There are two studs on pads for correct location

- Stand on a ladder
- Identify the 4 studs
- Select the best location according to the vehicle
- Remove cover
- Use a 10mm socket for the mounting
- Store these bolts

- Place a clamp over one of the mounting positions. An end with a round hole in it should face down. Top edge of clamp should point to the roof centre
- Use an M6x35 screw to mount the clamp
- Check that clamp is mounted correctly
- Tighten the screw
- Repeat for all four mounting positions

### ***2. Crossbar Fitment***

---

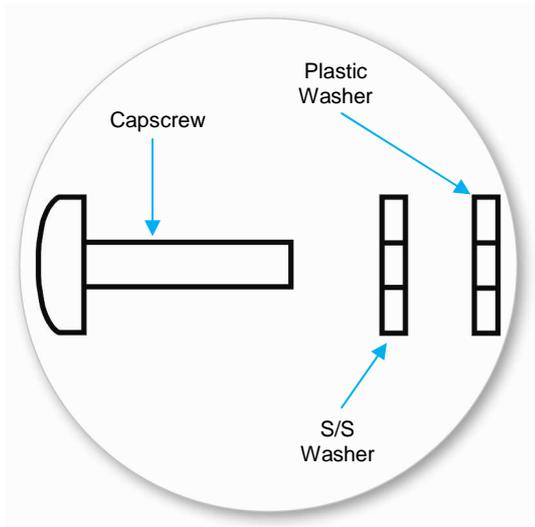

2.1



2.2

- Place crossbar assemblies over the clamps
- Move crossbar legs in or out to match clamp positions
- Place steel and plastic washers on M8 capscrews in same sequence as shown on a picture above

- Press down on crossbar to line up the thread on square nut in the foot and clamp
- Attach leg to clamp by fitting M8 capscrew through the clamp and screwing it into the square nut inside of the foot
- Repeat for all four clamps



- Tighten M8 capscrews to 4Nm
- Press leg inwards and pull crossbar out to adjust position of crossbar on legs
- Check that crossbars overhang is even on each side
- Tighten top adjusting screw to 4Nm on all four legs
- Fit the four leg cover panels by hooking them in at top first then clipping them in at the sides.

### ***Warning Notes***

---

- Use these instruction in conjunction with crossbar instructions

***WARNING: Check the Tightness of Screws Regularly***